

Azurewave AW-GR520
IEEE 802.11 b/g Wireless Router with 4 Port Switch

Quick Installation Guide



www.azurewave.com


Contents of Package:

Azurewave AW-GR520

- 802.11 b/g Wireless User Manual on Router
- CD-ROM
- Power Adapter 5V/2.0A
- Ethernet Cable
- Quick Installation Guide

Hardware Installation:


LED Indicator & Hardware overview

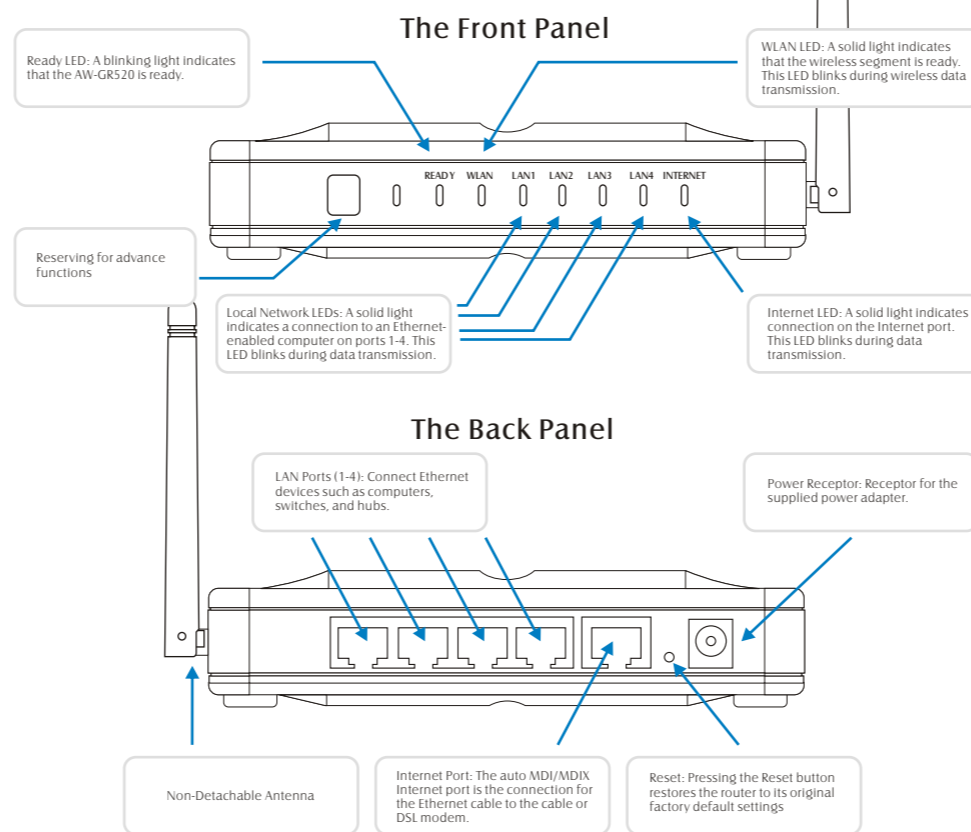


1. Connect your broadband modem's Ethernet cable to the Router's Internet port.
2. Connect one end of an Ethernet network cable to one of the numbered ports at the back of the Router. Connect the other end to an Ethernet port on a network device, e.g., a PC, print server, or switch. Repeat this step to connect more PCs or other network devices to the Router.
3. Connect the included power adapter to the Router's Power port, and then plug the power adapter into an electrical outlet.
4. Locate an optimum location for the Router. The best place for the Router is usually at the center of your wireless network, with line of sight to all of your wireless devices.

AW-GR520 Configuration:

1. To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the AW-GR520 router (192.168.0.1).

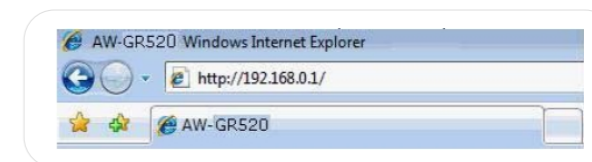


Setup Tutorial

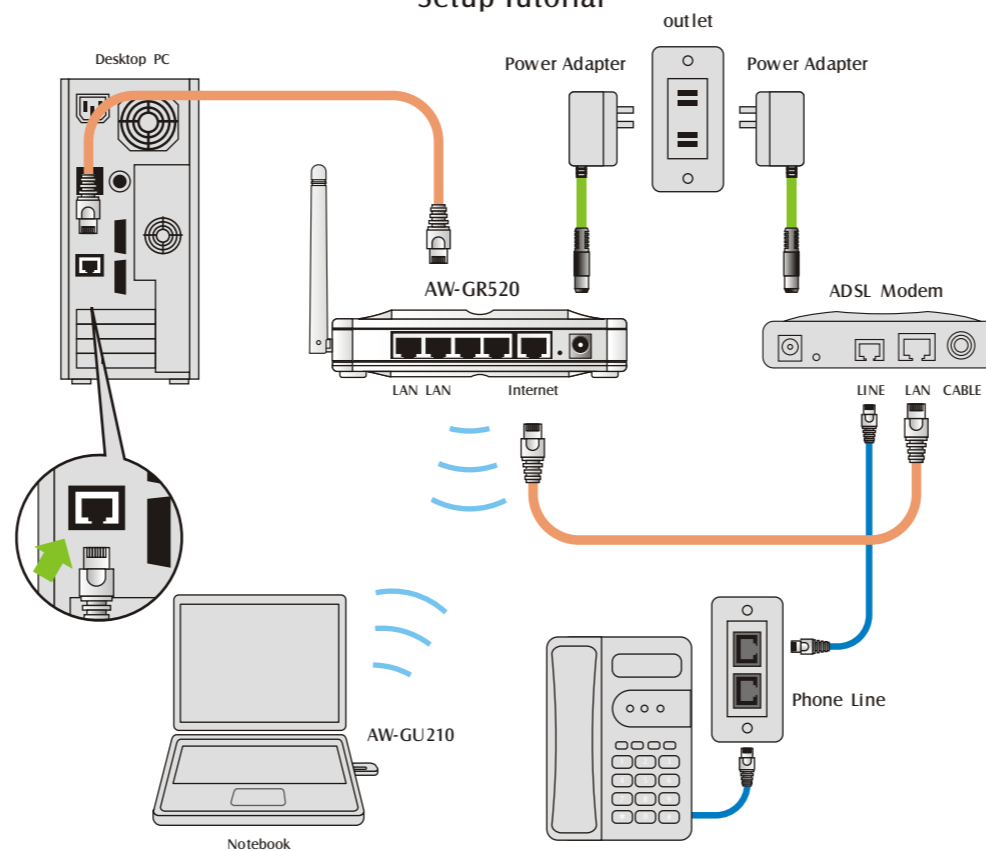

*Environmental factors may adversely affect range

2. Network Type:
Network-WAN (Internet) PPPoE (Typical) (Please refer to AW-GR520's User Manual to choose your WAN type.)
Connection Type: Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services.

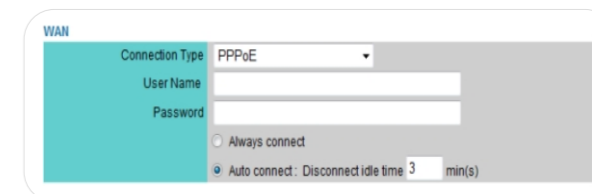

- * User Name: Enter your PPPoE user name.
Password: Enter your PPPoE password
Select either "Always connect" or "Auto connect".
The AW-GR520 basic setting is done.
- * Please refer to AW-GR520's user manual for advanced functions, for example, WPA security setting.
- * AzureWave strongly recommends the AW-GU210 or AW-GE870 as the best counterparts for AW-GR520