


**AW-CU300AV3-USB is IoT Connectivity Evaluation Board for AWS IoT Core, with FreeRTOS qualified MCU that uses AT commands to securely and efficiently communicate with AWS IoT Core**

- Hardware specification defined by Amazon and AzureWave
- With this dongle, end-device become AWS IoT Device
- UART interface for end-device to connect with
- Rich AT commands for end-device to communicate with AWS IoT Core

## Hardware Specification

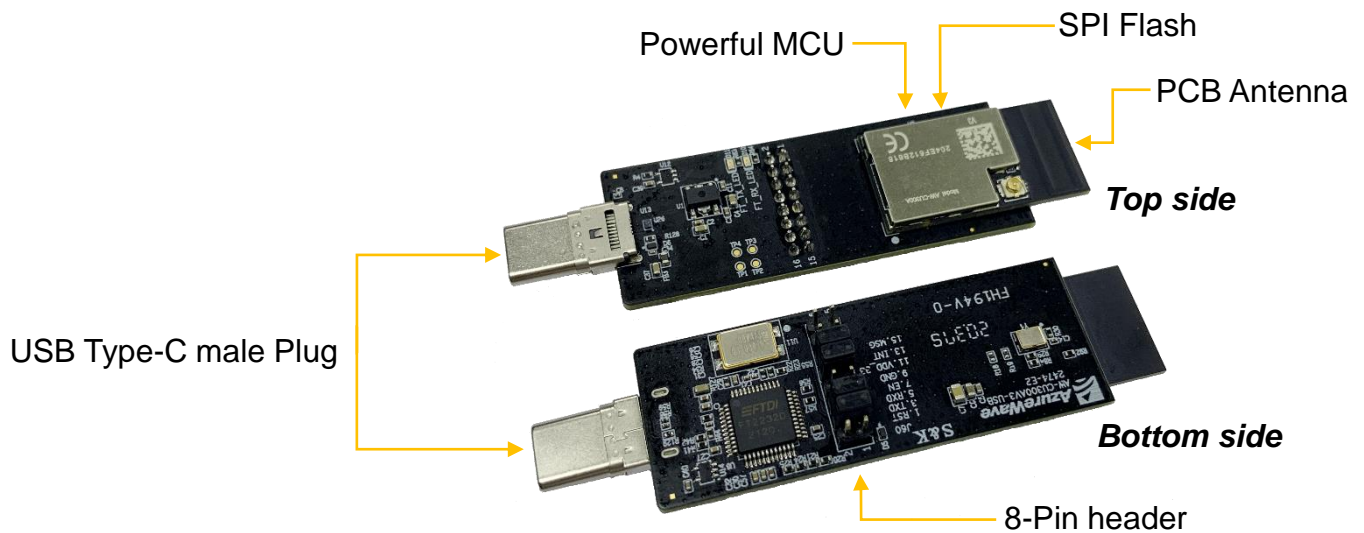

## How to Use AW-CU300AV3-USB

- Plug the AW-CU300AV3-USB into the USB type-C port of your notebook or desktop
- Check if Device Manager can recognize AW-CU300AV3-USB. If not, download FTDI Driver at <https://www.ftdichip.com/Drivers/VCP.htm>
- Open a serial connection by using PuTTY or the similar terminal emulator
- Type **AT+MOD\_About** and hit **Enter** key to identify the hardware version and firmware version of the dongle
- Find the command details in “AWS CONNECTOR AT Command Set” document



**AzureWave Technologies, Inc.**

Worldwide leading provider of wireless connectivity and image processing solutions

10F., No.94, Baozhong Rd., Xindian Dist., New Taipei City 23144, Taiwan  
TEL: +886-2-5599-5599

For more product information, please check our official website or contact our sales  
[www.azurewave.com](http://www.azurewave.com)