


AW-CU427-P is IoT Connectivity Module for AWS IoT Core, with FreeRTOS qualified MCU that uses AT commands to securely and efficiently communicate with AWS IoT Core

- Hardware specification defined by Amazon and AzureWave
- With this module, end-device become AWS IoT Device
- UART interface for end-device to connect with
- Rich AT commands for end-device to communicate with AWS IoT Core

Hardware Specification

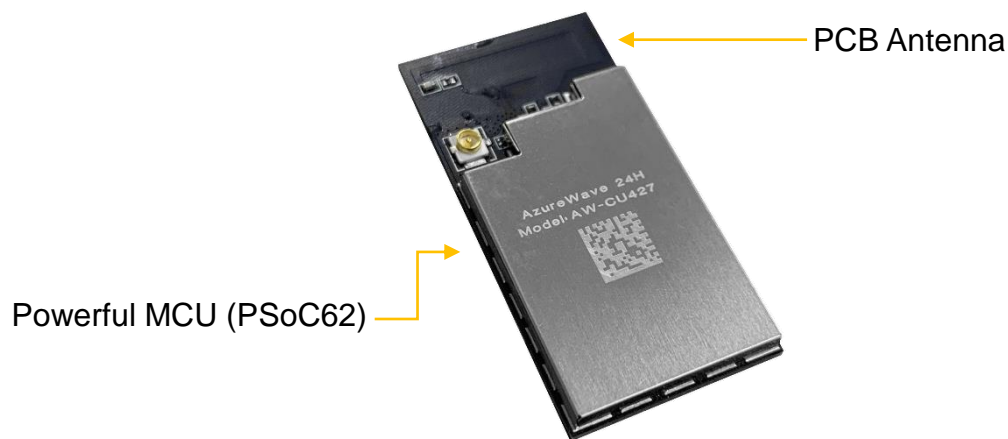

How to Use AW-CU427-P

- Visit [AWS Partner Device Catalog](#)
- Type “azurewave” to search for AW-CU427-USB, it is the evaluation board of AW-CU427-P
- Purchase the one or more samples as you need
- Refer to **Getting Started Guide** of AW-CU427-USB to understand how to use it
- Once your evaluation is completed, you could purchase AW-CU427-P to implement it on your device



AzureWave Technologies, Inc.

Worldwide leading provider of wireless connectivity and image processing solutions

10F., No.94, Baozhong Rd., Xindian Dist., New Taipei City 23144, Taiwan
TEL: +886-2-5599-5599

For more product information, please check our official website or contact our sales
www.azurewave.com